

Installation Instructions for ThermoChron Button on Snow Board.

A plastic mounting clip is provided to hold the themochron 'button'. A 3/16" hole should be drilled through the snow board in one of the corners approximately 1-1/2" from each of the edges. The provided screw and locking nut is then used to attach the plastic clip. Once the clip is mounted, the themochron is simply slipped into the clip. The board should be used with the thermoChron always on the top of the board.



Note the 3/16" hole already drilled in the lower-left corner of this miniature snow board.

Install the lock washer on top of the black plastic clip just under the nut. Tighten to orient the clip so that the thermochron will be closer to the center of the board.



Start-up form.

Please confirm that the station ID and the intended use of the thermochron (as printed in colored ink) are correct. The time of 'start-up' should be written in as the time when the thermochron is actually in its *outside* observing location. Mail the completed start-up form back in the supplied pre-addressed and stamped envelope as soon as the installation has been completed.